

# U.S. BASED SUPPORT

### HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



1.410.840.3555



support@iagperformance.com



VIDEO INSTRUCTIONS https://www.youtube.com /watch?v=oY-HCMAGw1Y










## IAG-ACC-5335 IAG Radiator Shroud For 2015-2021 Subaru WRX/STI

Congratulations on the purchase of your IAG Radiator Shroud, and thank you for choosing IAG Performance! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

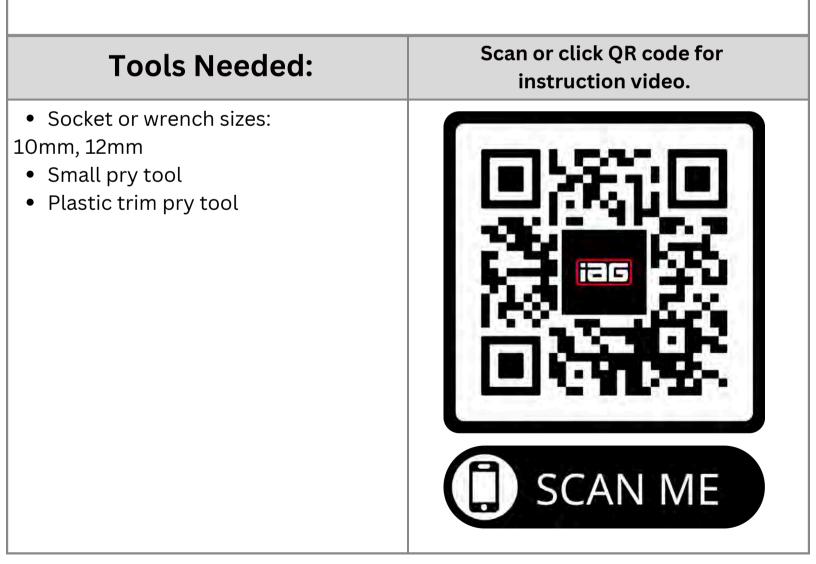


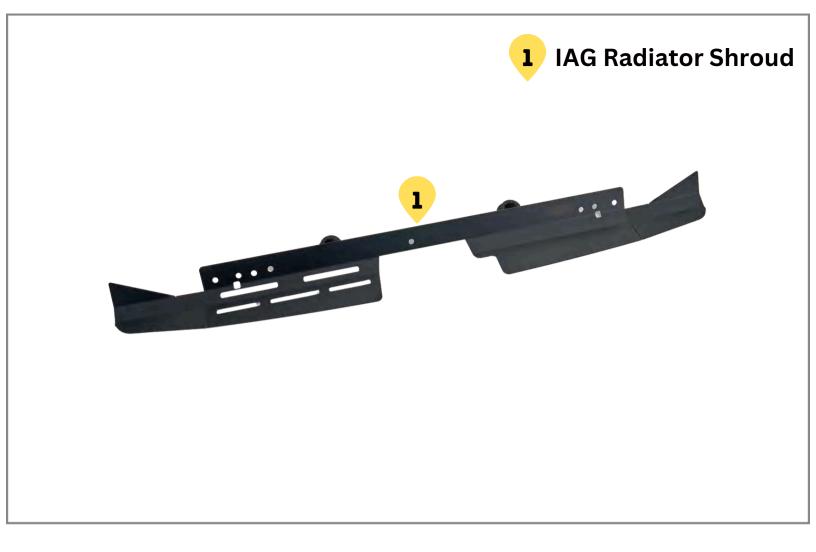

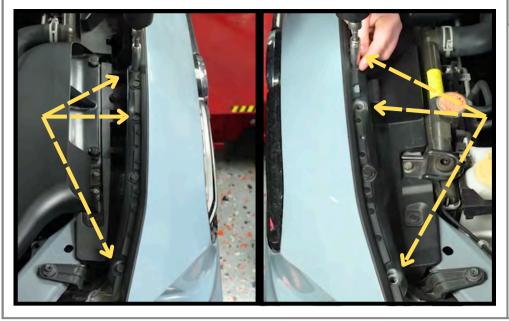

Bumper removal is required to remove factory Radiator Cover.

Start by removing the six 10mm bolts from the top of the bumper.

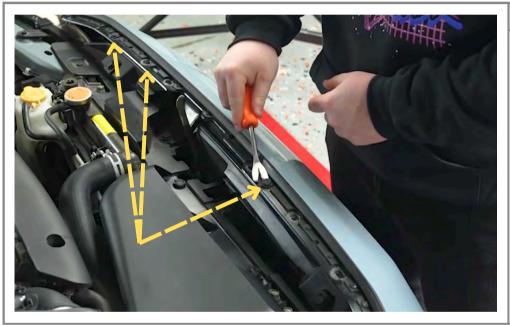

#### Step 2

Using a small pry tool, remove three push clips from top of the bumper.

 


#### Step 3

Remove the rubber strip from the top of the bumper.



#### Step 5






#### Step 6

Loosen edges of the bumper from the vehicle by hand or with a plastic pry tool.

If vehicle is equipped with fog lights, disconnect the fog lights.

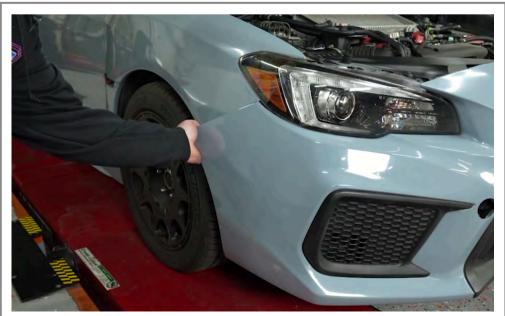


#### Step 6 pt. 2





#### Using even force, pull the bumper away from the vehicle.

Remove bumper and set aside.
 
#### Step 7



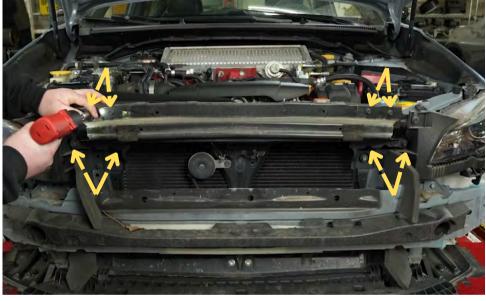

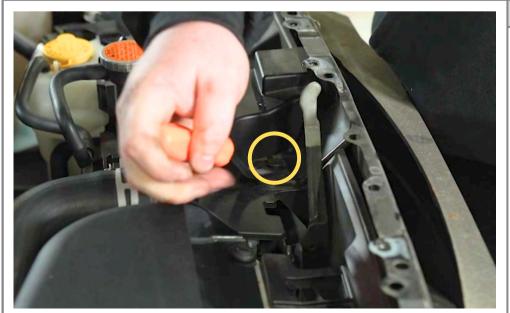

#### Step 7 pt. 2


Remove the push clip from the Upper Support Bar.

#### Step 7 pt. 3



#### Step 8


Remove the seven push clips from the factory Radiator Cover and Intake Air Duct.

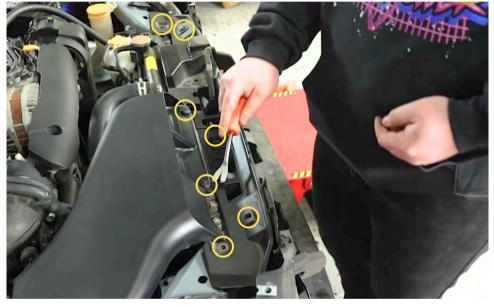



Remove the factory Radiator Cover and Intake Air Duct.



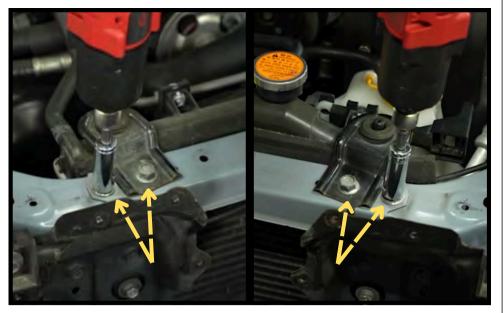


Remove the four 12mm bolts from the Radiator Stays and Radiator Support Bar.

Remove the Radiator Stays.

#### Step 10

Reinstall the factory Upper Support Bar with the factory hardware.



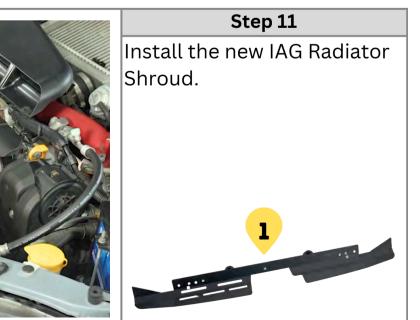



Reinstall the Radiator Stays with the factory bolts.

Reinstall the Radiator Support Bar bolts.



#### Step 13

Reinstall the Intake Air Duct.

Reinstall the bumper in reverse order of removal.



If you have any questions about the product or install please reach out to support@iagperformance.com or call 410-840-3555