



**U.S. BASED
SUPPORT**

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagperformance.com



VIDEO INSTRUCTIONS

<https://iagperformance.com/vi/IAG-TLS-001>



SCAN ME



**IAG PERFORMANCE
SUBARU EJ OIL PUMP SEAL
INSTALL TOOL**



IAG Performance
Subaru EJ Oil Pump Seal
Install tool

Part Number: IAG-TLS-0011

Congratulations on the purchase of your Oil Pump Seal Tool, and thank you for choosing IAG Performance!
These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

Tools Needed:

Socket/Wrench Sizes:

- 22mm Socket

Scan or click QR code for instruction video:



Parts Included:

- 1** Seal Driver
- 2** (X2) Washer
- 3** Bearing



Not Included:


- Oil Pump Seal
- Crankshaft Bolt

Step 1

Prepare the new Oil Pump Seal (Not Provided).

Install the Oil Pump Seal by hand onto the front of the Oil Pump.

Ensure the Seal is seated evenly and centered.

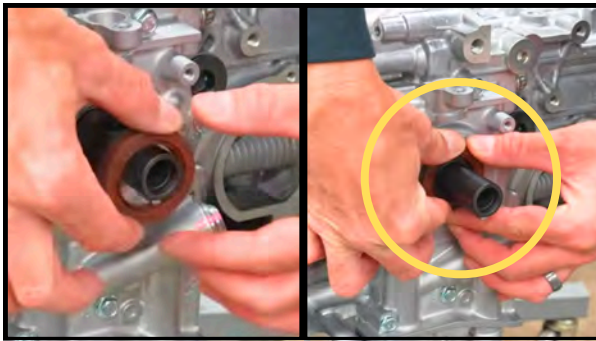


Step 2

Prepare Seal Driver Tool, two Washers, and Bearing.

Install the Bearing onto the tool, sandwiched between the two Washers.

Refer to diagram.

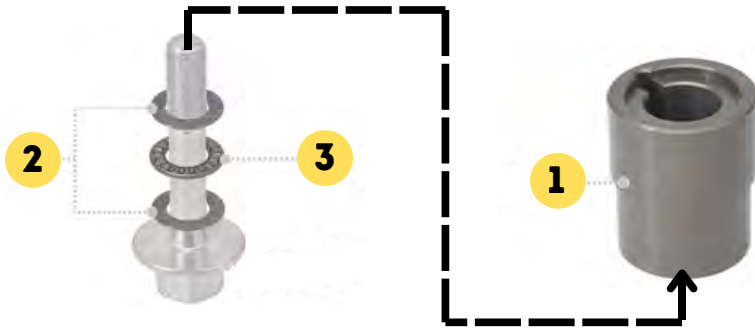

Step 3

Prepare the factory Crank Bolt.


Install the Crank Bolt into the front of the Tool on top of the Bearing as shown.



Step 4

Install the Seal Driver Tool onto the front of the Crankshaft.

Ensure that the Keyhole is aligned with the Key on the Crankshaft.

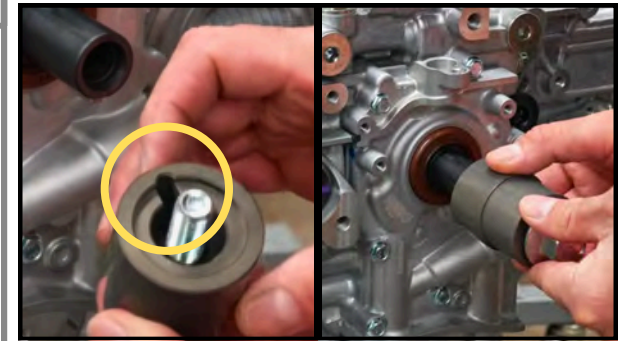

Step 5

Tighten the Crank Bolt by hand until snug.

Ensure the Tool is properly aligned to the Seal.



Step 6

Using a 22mm socket, tighten the Crank Bolt until the Seal is fully seated into the Oil Pump.



Step 7

Remove the Crank Bolt and Seal Driver Tool.

Inspect the Seal and ensure it is fully seated to the Oil Pump.

Installation Complete.

