



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagperformance.com



VIDEO INSTRUCTIONS

<https://www.youtube.com/watch?v=8Ms5BgNBo7M>





IAG Fender Shrouds

For 2015-2021 Subaru WRX/STI


IAG Fender Shrouds for 2015-2021 Subaru WRX/STI

Part Number: IAG-ACC-2601

Congratulations on the purchase of your Fender Shrouds, and thank you for choosing IAG Performance! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

- 1 (X2) Fender Shroud**
- 2 (X2) Color Plate**
- 3 (X6) 2.5mm Allen (Short)**
- 4 (X6) Rivet Nut**
- 5 (X2) Strut Spacer**
- 6 (X6) 2.5mm Allen (Long)**

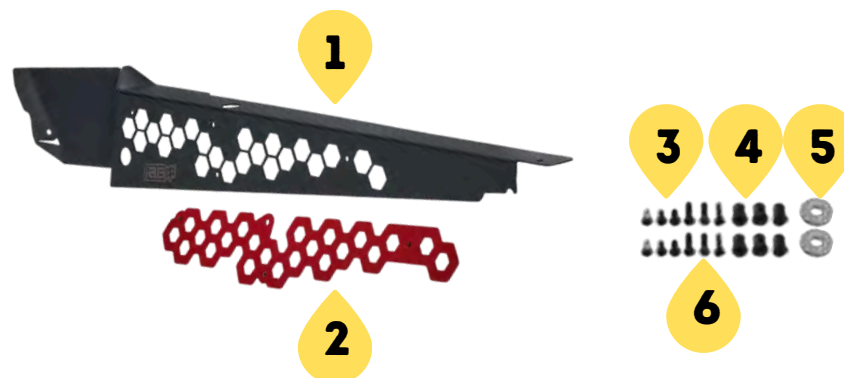

Tools Needed:

2.5mm Allen Wrench
12mm Wrench
Pocket Screw Driver
Small Pry Tool





Step 1: Using a small pry tool, remove the push clips from the factory fender cover. Remove the fender cover.




Step 2: Support the hood with a hood prop.




Step 3: Using a pocket screwdriver, pry the hood strut clip up. Remove the hood strut from the ball, and set strut aside.




Step 4: Using a 12mm wrench, remove the hood strut ball.

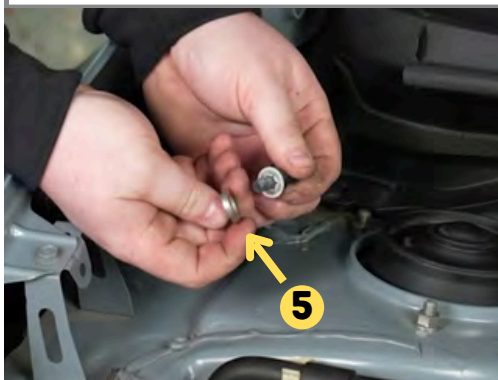


Step 5: Install the provided Strut Spacer onto the hood strut ball, and reinstall.

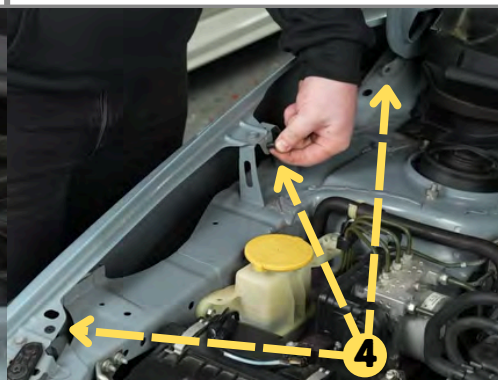

Step 6: Install the Rivet Nuts into the 3 shown locations.

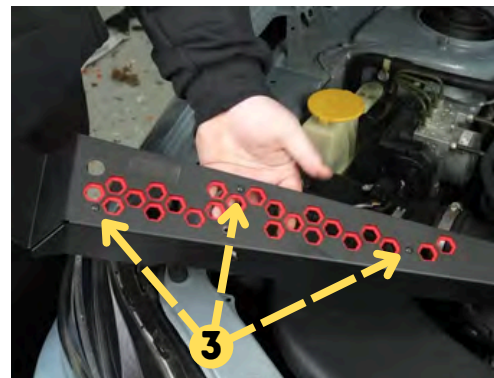

Step 7: Using three short 2.5mm Allen bolts, install Color Plate to the Shroud. Center the plate then tighten. (5Nm)

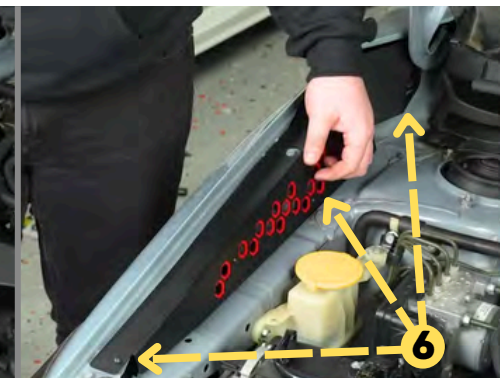

Step 8: Using three long 2.5mm Allen bolts, install Shroud onto fender. Apply pressure to Shroud and tighten. (5Nm)



Step 9: Reinstall the hood strut, ensure that the hood strut clip is seated.



Step 10: Repeat process for other side.



If you have any questions about the installation or product please contact support@iagperformance.com or call 410-840-3555