

IAG I-Line Defrost Vent Cover Hex Pattern for 21+ Ford Bronco



IAG-ACC-F3084 IAG I-Line Defrost Vent Cover Hex Pattern for 2021+ Ford Bronco

Part# IAG-ACC-F3084

Congratulations on the purchase of your IAG I-Line Defrost Vent Cover Hex Pattern, and thank you for choosing IAG Off-Road. These instructions are intended for users with basic mechanical skills. Professional installation is not required. The average installation time is approximately 10-15 minutes.

Video instructions can be found at the link below.

<https://youtu.be/LLB0vy8CDxg>

Step 1/13



IAG-ACC-F3084 IAG I-Line Defrost Vent Cover Hex Pattern for 2021+ Ford Bronco

Part#IAG-ACC-F3084

Tools Required For Installation:


Rag

Step 2/13

Step 3/13

Numbered annotations (1)

- 1 IAG I-Line Defrost Vent Cover Hex Pattern

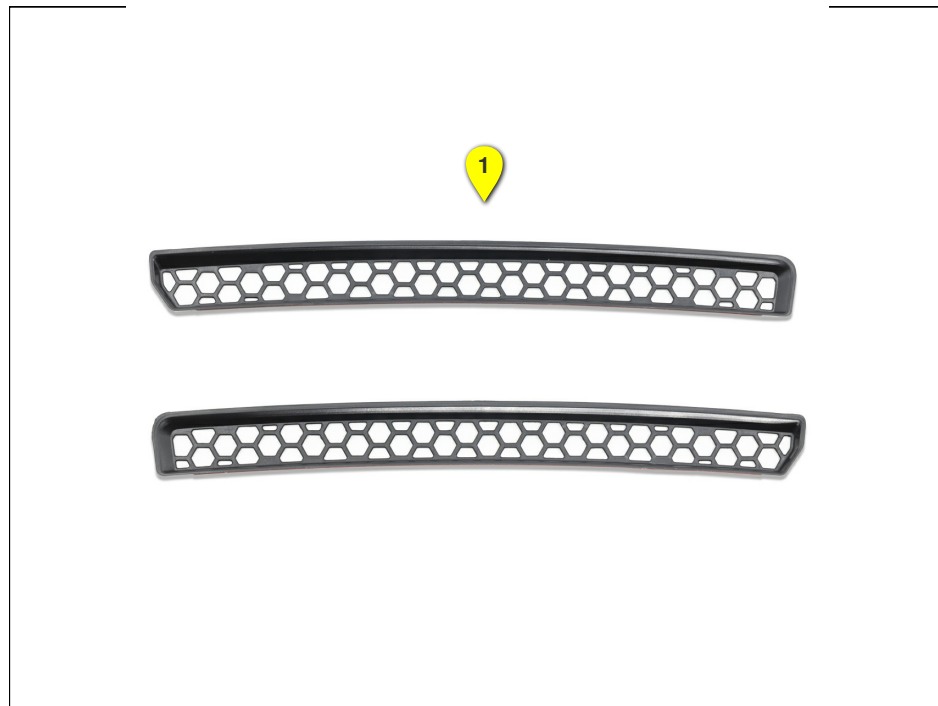

Step 4/13

Numbered annotations (1)

- 1 Locate defrost vents




Step 5/13

Numbered annotations (1)

- 1 Wipe your vents with a clean rag



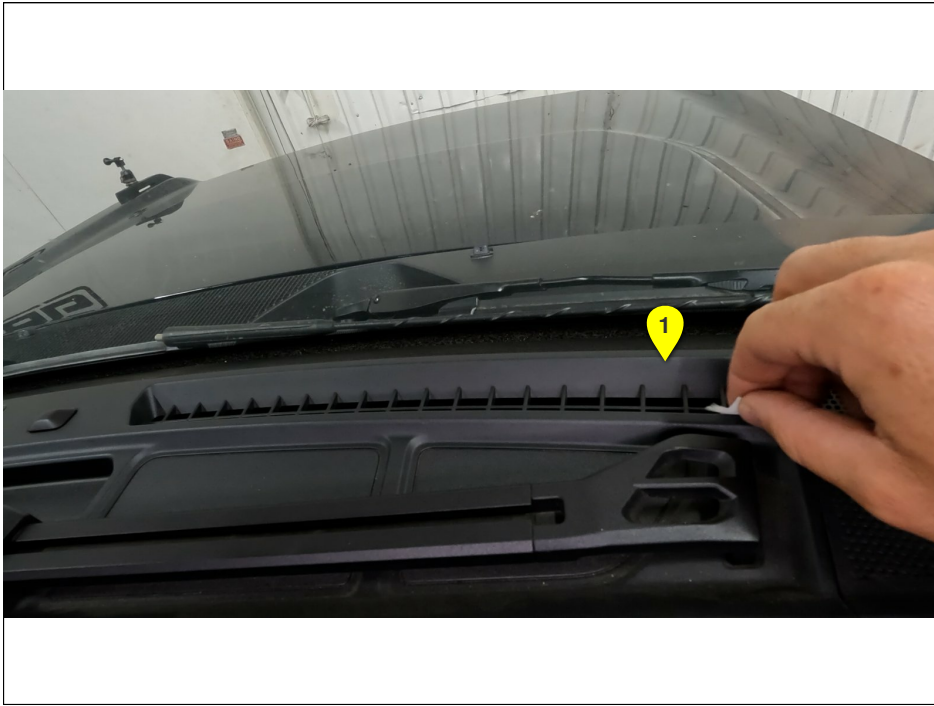

Step 6/13

Numbered annotations (1)

- 1 Use included adhesive promoter all the way around the vents



Step 7/13

Numbered annotations (1)

- 1 Peel and expose adhesive tape

Step 8/13

Numbered annotations (1)

- 1 Line up the vent covers with your factory vents



Step 9/13

Numbered annotations (1)

- 1 Starting from one side place the adhesive tape to the vent



Step 10/13

Numbered annotations (1)

- 1 Press down firmly on all edges for strong adherence



Step 11/13

Numbered annotations (1)

- 1 Press to the front



Step 12/13

Numbered annotations (1)

- 1 Press to the rear



Step 13/13

Numbered annotations (1)

- 1 Enjoy the look of your new Defrost Vent Cover

