



IAG Performance Standard Mount Tag Delete For 2006-14 Subaru WRX / STI

Part# IAG-BDY-3200BK, IAG-BDY-3200BL

Thank you for choosing the IAG Tag Delete. IAG recommends professional installation for this product. If you do the installation yourself, please reference the OE Service Manual for anything not covered in these instructions. If you do not own a Service Manual you can access and download the Subaru Service Manual for your car online at techinfo.subaru.com (\$34.95).



Parts List		
Part Name	Quantity	Notes
IAG CNC Machined Tag Delete	1	
IAG Threaded Rubber Inserts	2	
IAG Anodized Aluminum 10/32-5/8" Allen Screw	2	
Allen Wrench, 1/8"	1	


2006-07 GD WRX / STI Standard Mount

1. Align recess with existing holes in bumper.


2. Make sure rubber nut is threaded on screw. It should be threaded until you just start feeling resistance.

3. Align rubber nuts to existing holes on the bumper and insert.



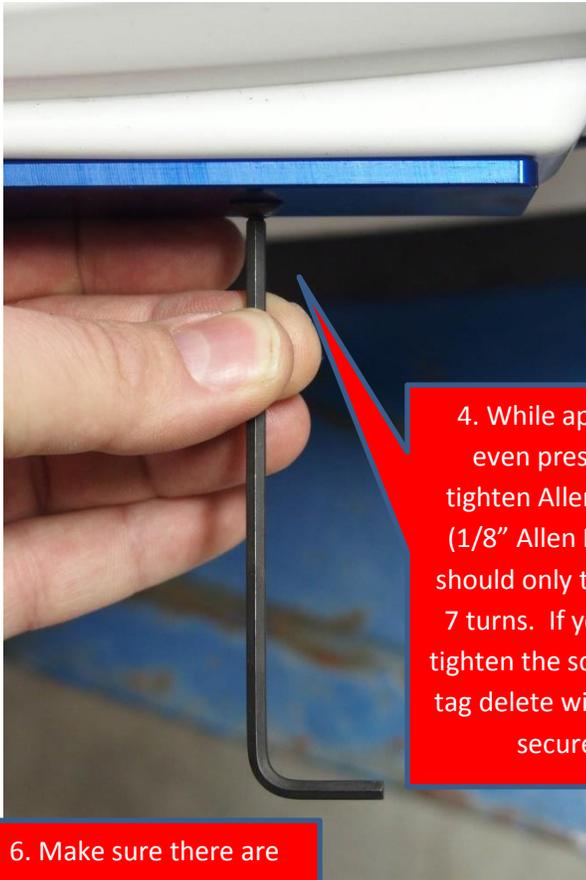

4. While applying even pressure, tighten Allen screw (1/8" Allen Key). It should only take 5 to 7 turns. If you over tighten the screw, the tag delete will not be secure.

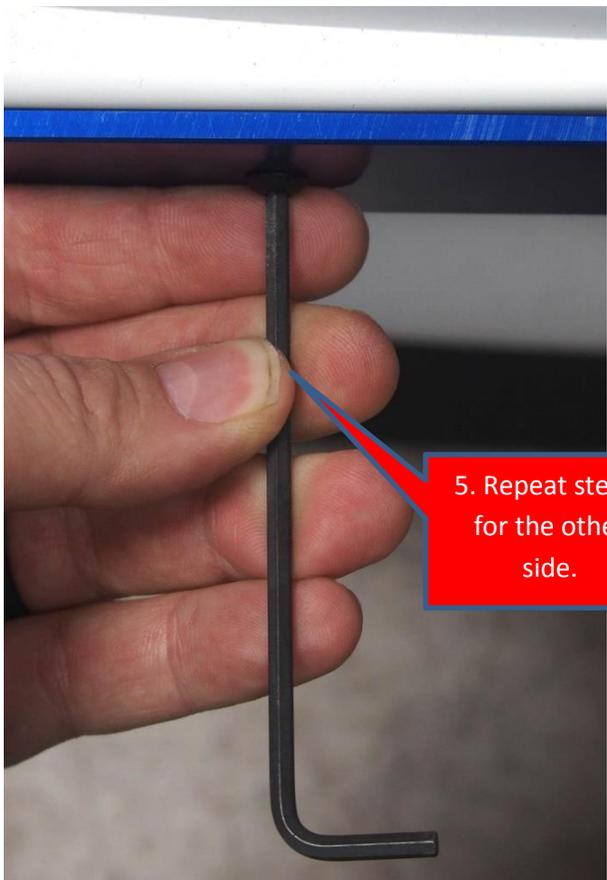

5. Repeat step 4 for the other side.

6. Make sure there are minimal gaps behind the screws.



7. Finished



2008-14 GR WRX / STI Standard Mount

1. Align Tag Delete with the bumper. Notice the recess aligns with the screw holes.




2. Press Tag Delete into the square holes in the bumper. Do not lubricate the rubber nuts.





3. ***WARNING, DO NOT OVERTIGHTEN***

While applying pressure to the Tag Delete, use the supplied allen wrench to tighten the screw. TIGHTEN SCREW APPROXIMATELY 6 TURNS. Overtightening will cause the Tag Delete to be less secure.

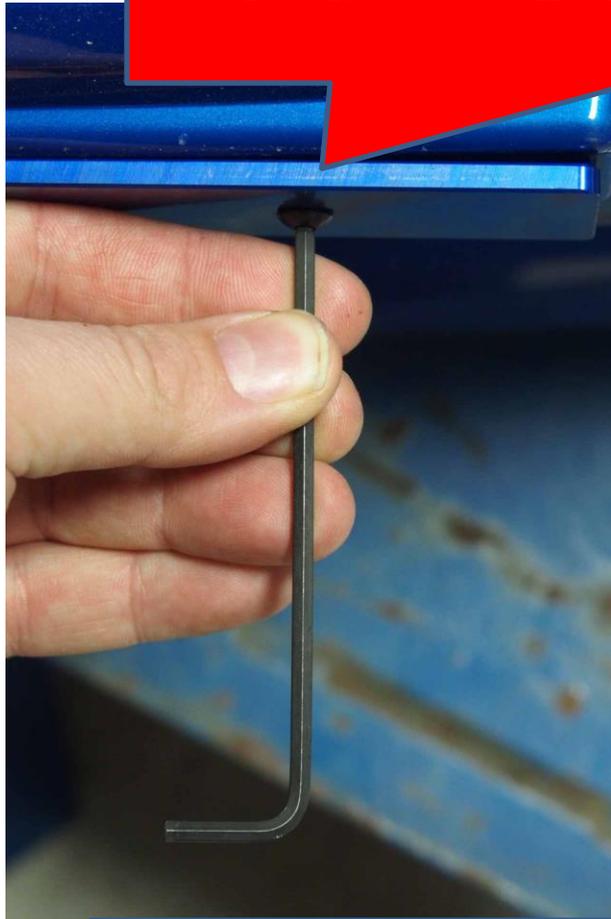

4. Repeat step 3 for the opposite side.

5. If the screws are tightened properly, you should not be able to pull the Tag Delete off the bumper without excessive force.

6. Finished.

