



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:1.410.840.3555)



support@iagperformance.com





IAG Canards

For 2015-2021 WRX/STI


IAG Canards for 2015-2021 WRX/STI

Part Number: IAG-BDY-5340

Congratulations on the purchase of your IAG Canards, and thank you for choosing IAG Performance! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

- 1** Driver Canard
- 4** Passenger Canard
- 2** Driver Bracket
- 5** Passenger Bracket
- 3** (X6) Lock Nuts
- 6** (X6) Rivnuts
(X6) M4 Bolts

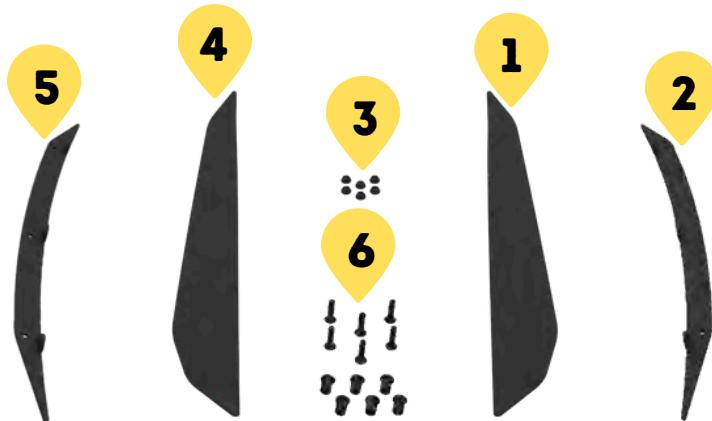

Tools Needed:

- 2.5mm Allen Wrench
- 7mm Wrench/Socket
- 5/16 Drill Bit

Install Canard

Step 1: Assemble

Using a 7mm wrench, assemble Canard onto the Canard Bracket with provided lock nuts, tighten until snug. (2Nm)

Step 2: For installation with provided hardware.

If installing with provided bolts, prepare surface for drilling. Recommend using masking tape to prevent paint chips.

Align the Canard on the vehicle, and mark the holes. Using a 5/16 drill bit, drill the marked holes on the vehicle.

Remove masking tape, Insert the Rivet-Nuts into the drilled holes. Install the adhesive strip onto the Canard.

Using a 2.5mm Allen Wrench, assemble Canard onto vehicle and tighten M4 bolts until light resistance.


Step 3: For installation with 3M adhesive.

If installing with double sided 3M tape, prepare surface for adhesive. Clean the surfaces with prep pad.

Install the adhesive strip onto the Canard, then install the Canard onto vehicle. Apply even pressure when installing.

Recommend 24 hour set time before driving.

Step 1

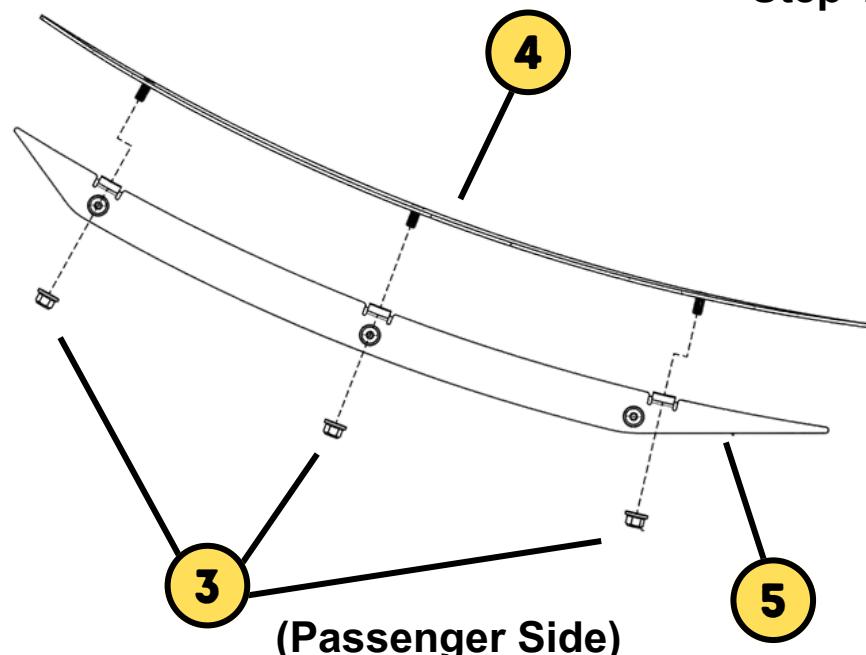

Step 2

