

IAG I-Line Pinch Weld Cover for 21+ Ford Bronco 4 Door



IAG-BDY-F3039 IAG I-Line Pinch Weld Cover for 2021+ Ford Bronco Four Door, Black Powder Coated Steel

Part# IAG-BDY-F3039

Congratulations on the purchase of your IAG I-Line Pinch Weld Cover Four Door, and thank you for choosing IAG Off-Road. These instructions are intended for users with basic mechanical skills. Professional installation is not required. The average installation time is approximately 20-30 minutes.

Video instructions can be found at the link below.

<https://youtu.be/aEVJP6KTLFY>

Step 1/14



IAG-BDY-F3039 IAG I-Line Pinch Weld Cover for 2021+ Ford Bronco Four Door, Black Powder Coated Steel

Part# IAG-BDY-F3039

Tools Required For Installation:


10mm. socket, 12mm Wrench, 12mm Socket, Socket Wrench

Step 2/14

Step 3/14

Numbered annotations (2)

- 1 Pinch Weld Cover
- 2 Hardware

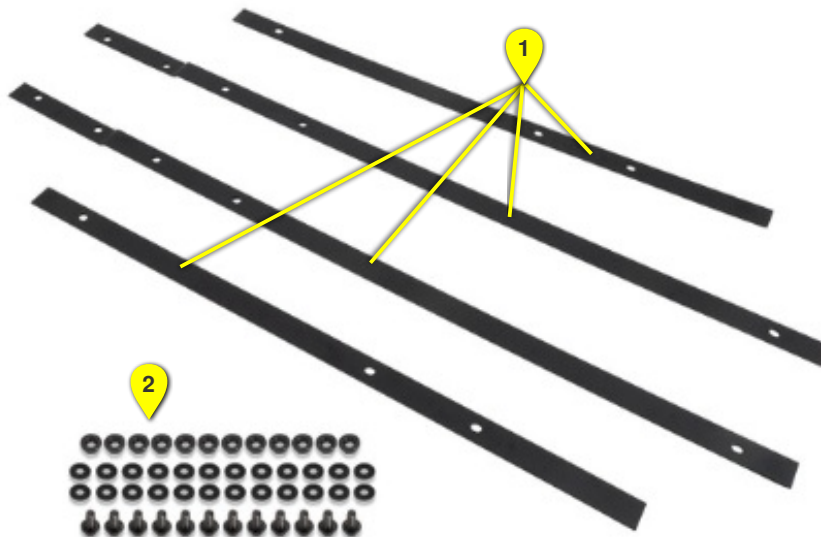

Step 4/14

Numbered annotations (1)

- 1 Locate two (2) front factory bolts



Step 5/14

Numbered annotations (1)

- 1 Using a 10mm. socket remove two (2) factory bolts





Step 6/14

Numbered annotations (1)

1 Bolts removed



Step 7/14

Numbered annotations (1)

1 Get your front cover

Step 8/14

Numbered annotations (1)

- 1 Line up the front cover



Step 9/14

Numbered annotations (1)

- 1 Install provided 10mm. bolts and washer in to factory holes and tighten with socket wrench






Step 10/14

Numbered annotations (1)


- 1 Install three (3) 12mm bolts with washers and nuts

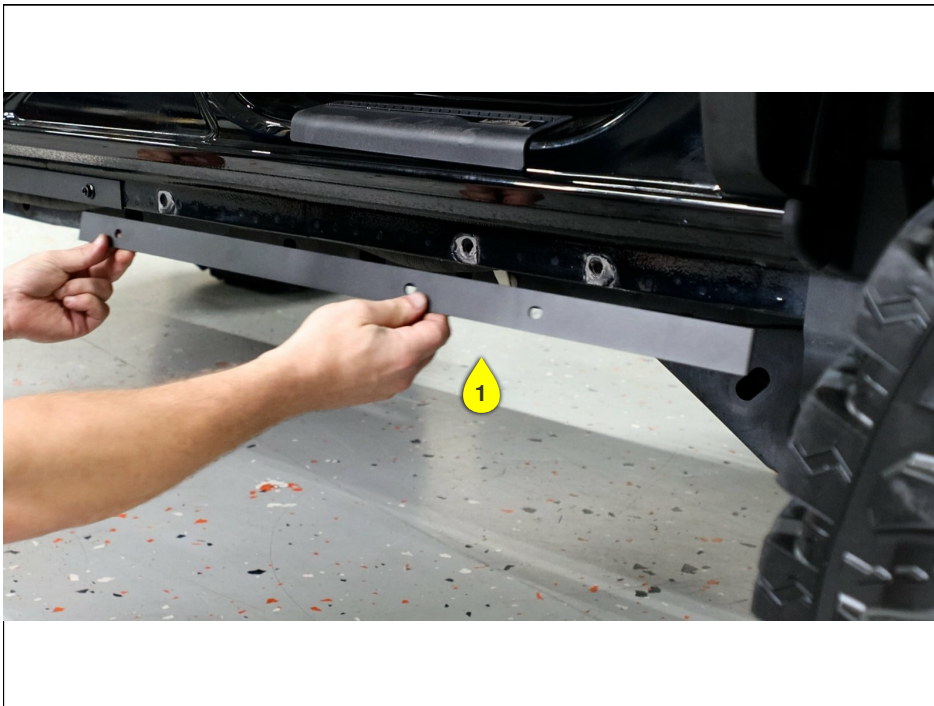

Step 11/14

Numbered annotations (1)

- 1 Line up rear cover

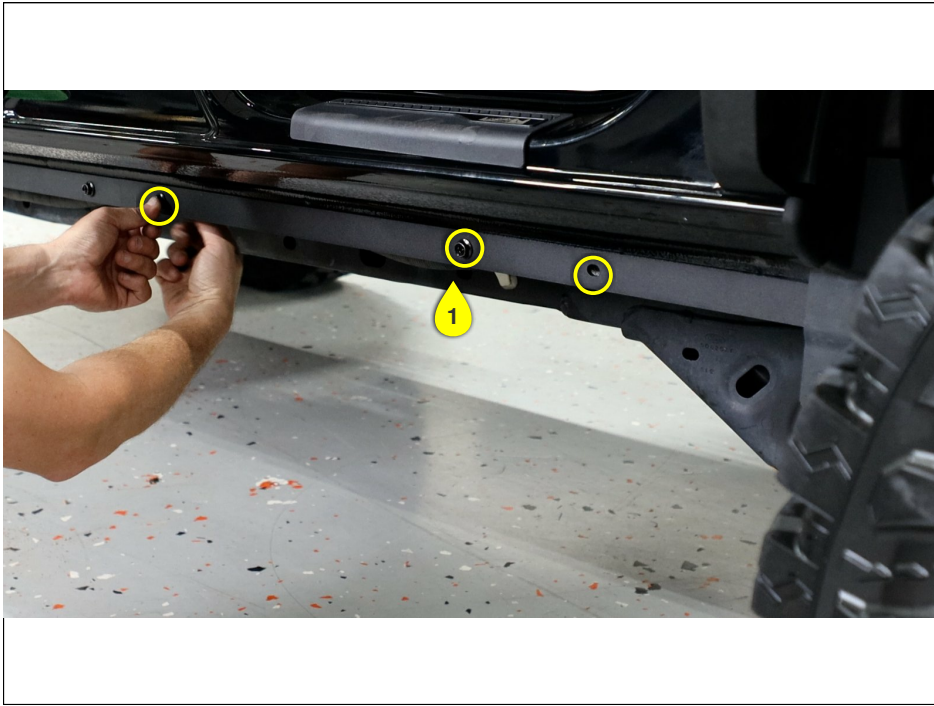

Step 12/14

Numbered annotations (1)

- 1 Install three (3) provided 12mm head bolts washers and nuts



Step 13/14

Numbered annotations (1)

- 1 Tighten all bolts with 12mm wrench and socket.
Repeat for opposite side

Step 14/14

Numbered annotations (1)

- 1 Enjoy the IAG I-Line Pinch Weld Cover

