





IAG-BDY-F3192 IAG X-Brace Tailgate Hinge Reinforcement for 21+ Bronco w/ Sasquatch

(Not Raptor)

Part# IAG-BDY-F3192

Congratulations on the purchase of your IAG X-Brace Tailgate Hinge Reinforcement (Not Raptor), and thank you for choosing IAG Performance. These instructions are intended for users with basic mechanical skills. Professional installation is not required. The average installation time is approximately 60-90 minutes. A second person to help with lifting is recommended for easiest installation.

Video instructions can be found at the link below.

https://youtu.be/wnyyXdvqjks

Step 1/72

IAG OFF-ROAD 1/37




IAG-BDY-F3192 IAG X-Brace Tailgate Hinge Reinforcement for 21+ Bronco w/ Sasquatch (Not Raptor)

Part# IAG-ACC-F3192

Tools Required For Installation:

10MM Socket, 13MM Socket, TP45 Torx, 6MM Allen, Ratcheting Wrench, Phillips Screwdriver

Optional: Plastic Body Panel Tool

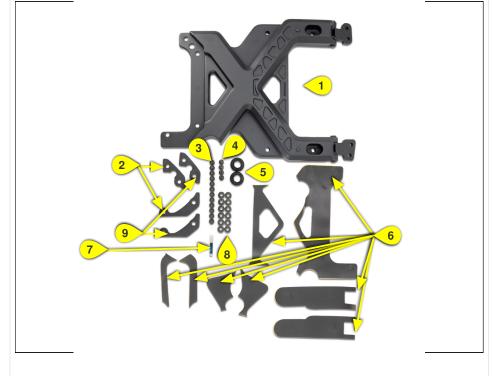

Step 2/72

Step 3/72

Numbered annotations (9)

- 1 X-Brace Tailgate Reinforcement
- 2 Thin spare tire mount spacers
- 3 13mm Bolts
- 4 6mm Allen Head Bolts
- 5 Spare tire support bushings
- Adhesive foam protection for X-Brace
- 7 Loctite
- 8 Washers
- Thick spare tire mount spacers

IAG OFF-ROAD 2/37



Step 4/72

Numbered annotations (1)

Unbolt the spare tire



Step 5/72

Numbered annotations (1)

Remove the spare tire


IAG OFF-ROAD 3/37



Step 6/72

Numbered annotations (1)

1 Fold down both rear seats

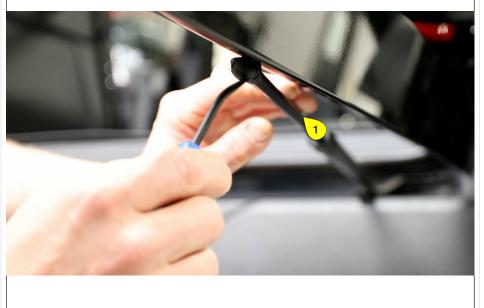

Step 7/72

Numbered annotations (1)

Using a pry tool or flat head screwdriver, remove the tailgate strut

IAG OFF-ROAD 4/37



Step 8/72

Numbered annotations (1)

Remove strut



Step 9/72

Numbered annotations (1)

Remove the tailgate access panel

IAG OFF-ROAD 5/37



Step 10/72

Numbered annotations (1)

Unclip two (2) harnesses from the tail gate




Step 11/72

Numbered annotations (1)

1 Disconnected harnesses

IAG OFF-ROAD 6/37

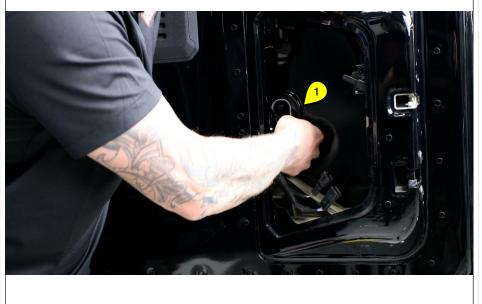

Step 12/72

Numbered annotations (1)

Unclip the tailgate wiring harness seal



Step 13/72

Numbered annotations (1)

Remove tailgate wiring harness seal and pull it through the tailgate

IAG OFF-ROAD 7/37



Step 14/72

Numbered annotations (1)

1 Tailgate with wiring harness removed



Step 15/72

Numbered annotations (1)

Using a 13mm wrench or socket, remove the eight bolts securing the spare tire mount

IAG OFF-ROAD 8/37



Step 16/72

Numbered annotations (1)

1 Remove spare tire mount



Step 17/72

Numbered annotations (1)

Using your TP45 Torx remove top hinge bolts

IAG OFF-ROAD 9/37



Step 18/72

Numbered annotations (1)

Once the bolts are removed open the hinge



Step 19/72

Numbered annotations (1)

Remove lower two (2) hinge bolts

IAG OFF-ROAD 10/37



Step 20/72

Numbered annotations (1)

Open the hinge



Step 21/72

Numbered annotations (1)

Open both hinges keeping the latch shut

IAG OFF-ROAD 11/37



Step 22/72

Numbered annotations (1)

With one hand supporting the tailgate. Unlatch the tailgate and slightly move it away from the rear of the Bronco



Step 23/72

Numbered annotations (1)

Place your tailgate, latch end first and handle side up into the trunk area of your bronco

IAG OFF-ROAD 12/37



Step 24/72

Numbered annotations (1)

Place a box or something you are comfortable with under the tailgate for support to keep the wiring harness from being so tight



Step 25/72

Numbered annotations (1)

Using a Phillips Screwdriver remove the four (4) push pins

IAG OFF-ROAD 13/37



Step 26/72



Step 27/72

Numbered annotations (1)

Using a 10mm wrench or socket remove the top bolt holding the hinge trim panel


IAG OFF-ROAD 14/37



Step 28/72

Numbered annotations (1)

Using a 10mm wrench or socket remove the bottom bolt holding the hinge trim panel

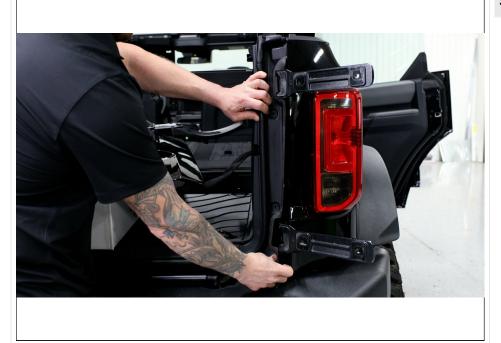

Step 29/72

IAG OFF-ROAD 15/37



Step 30/72

Numbered annotations (1)

1 Remove hinge trim panel



Step 31/72

Numbered annotations (1)

Using 13mm Socket or wrench, remove the two (2) hinge bolts

IAG OFF-ROAD 16/37



Step 32/72

Numbered annotations (1)

1 Remove the hinge



Step 33/72

Numbered annotations (1)

Using 13mm Socket or wrench, remove the two (2) hinge bolts


IAG OFF-ROAD 17/37



Step 34/72

Numbered annotations (1)

1 Remove the hinge

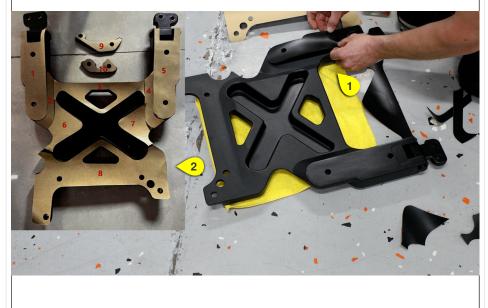

Step 35/72

Numbered annotations (2)

- Install the provided padding on to the backside of the X-Brace
- Refer to the digram for the proper layout

IAG OFF-ROAD 18/37



Step 36/72



Step 37/72

Numbered annotations (1)

Apply Loctite onto the provided four (4) 6mm Allen Head hinge bolts

IAG OFF-ROAD 19/37



Step 38/72

Numbered annotations (1)

Install X-Brace to the vehicle using the four (4) provided 6mm Allen bolts



Step 39/72

Numbered annotations (1)

Using the 6mm allen tighten the hinge bolts to the vehicle

IAG OFF-ROAD 20/37



Step 40/72

Numbered annotations (1)

Using one hand to support the end of the tailgate Use the other hand on the latch and carefully move the tailgate from the trunk of the vehicle



Step 41/72

Numbered annotations (1)

Reinstall the tailgate making sure it latches back into position

IAG OFF-ROAD 21/37



Step 42/72

Numbered annotations (1)

Install the X-Brace back to the tailgate using provided four (4) 13mm hinge bolts



Step 43/72

Numbered annotations (1)

Using 13mm Socket, snug fit the bolts on to the X-Brace

IAG OFF-ROAD 22/37



Step 44/72

Numbered annotations (1)

Once you are satisfied with the fitment of your X-Brace, using a 13mm Socket, tighten the bolts on to the X-Brace



Step 45/72

Numbered annotations (1)

1 Check the alignment and spacing between the tailgate and body corner, this is shown with offset in towards the front

IAG OFF-ROAD 23/37



Step 46/72

Numbered annotations (1)

Use the inner hinge bolts to adjust the tailgate in or out from the back of the vehicle



Step 47/72

Numbered annotations (1)

Correct alignment

IAG OFF-ROAD 24/37



Step 48/72

Numbered annotations (1)

Once properly aligned, tighten all hinge bolts using 13mm socket and wrench.



Step 49/72

Numbered annotations (1)

Reinstall the hinge trim panel

IAG OFF-ROAD 25/37



Step 50/72

Numbered annotations (1)

1 Reinstall four (4) push-pins



Step 51/72

Numbered annotations (1)

Using a socket or wrench reinstall two (2) 10mm trim panel bolts


IAG OFF-ROAD 26/37



Step 52/72

Numbered annotations (1)

Reinstall your tailgate strut by pushing it back onto the ball mount

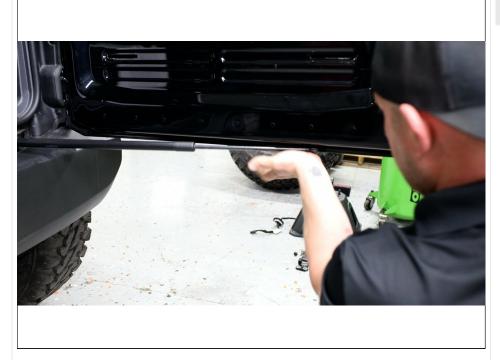

Step 53/72

IAG OFF-ROAD 27/37



Step 54/72



Step 55/72

Numbered annotations (1)

Install padding onto two of the X-Brace spacers (Thick Spacers)


IAG OFF-ROAD 28/37



Step 56/72

Numbered annotations (1)

The thinner spacer will be installed here.

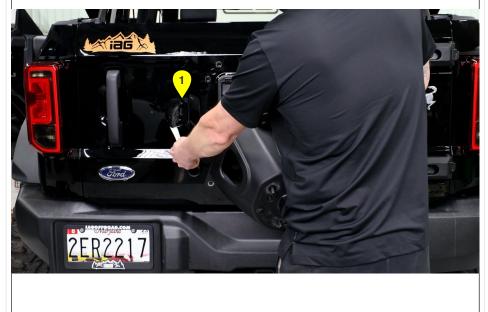

Step 57/72

Numbered annotations (1)

When reinstalling the spare tire mount be sure to pass the wires harness side first and reinstall the tailgate seal


IAG OFF-ROAD 29/37



Step 58/72

Numbered annotations (1)

This thinner spacer will be installed here.

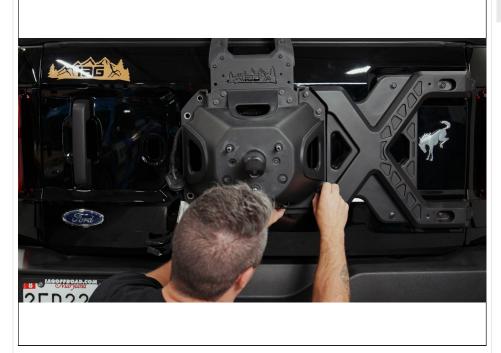

Step 59/72

IAG OFF-ROAD 30/37



Step 60/72

Numbered annotations (1)

Install spacers behind tire carrier, align and install and hand tighten the four (4) passenger side 13mm bolts



Step 61/72

Numbered annotations (1)

This thicker spacer with padding is installed here

IAG OFF-ROAD 31/37



Step 62/72



Step 63/72


Numbered annotations (1)

Install this thicker spacer with padding here.

IAG OFF-ROAD 32/37



Step 64/72

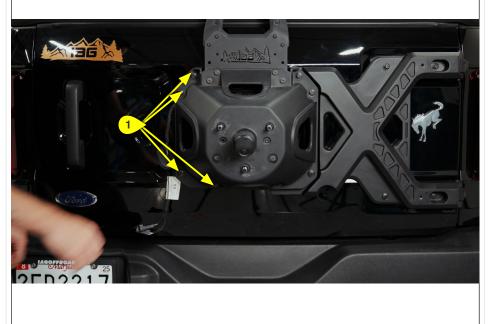

Step 65/72

Numbered annotations (1)

Install and hand tighten the (4)13mm bolts

IAG OFF-ROAD 33/37



Step 66/72

Numbered annotations (1)

Using a 13mm socket or wrench tighten the eight (8) bolts for the spare tire mount



Step 67/72

Numbered annotations (1)

1 Reinstall two (2) harnesses

IAG OFF-ROAD 34/37



Step 68/72

Numbered annotations (1)

Reinstall the tailgate access by pressing it back into position



Step 69/72

Numbered annotations (1)

Insert spare tire bushing into current bushing

IAG OFF-ROAD 35/37



Step 70/72

Numbered annotations (1)

Remount your spare tire



Step 71/72

Numbered annotations (1)

1 Tighten the lugs accordingly

IAG OFF-ROAD 36/37



Step 72/72

Numbered annotations (1)

You have completed the install of your X-Brace Tailgate Hinge Reinforcement for the 21+ Bronco

Enjoy

IAG OFF-ROAD 37/37